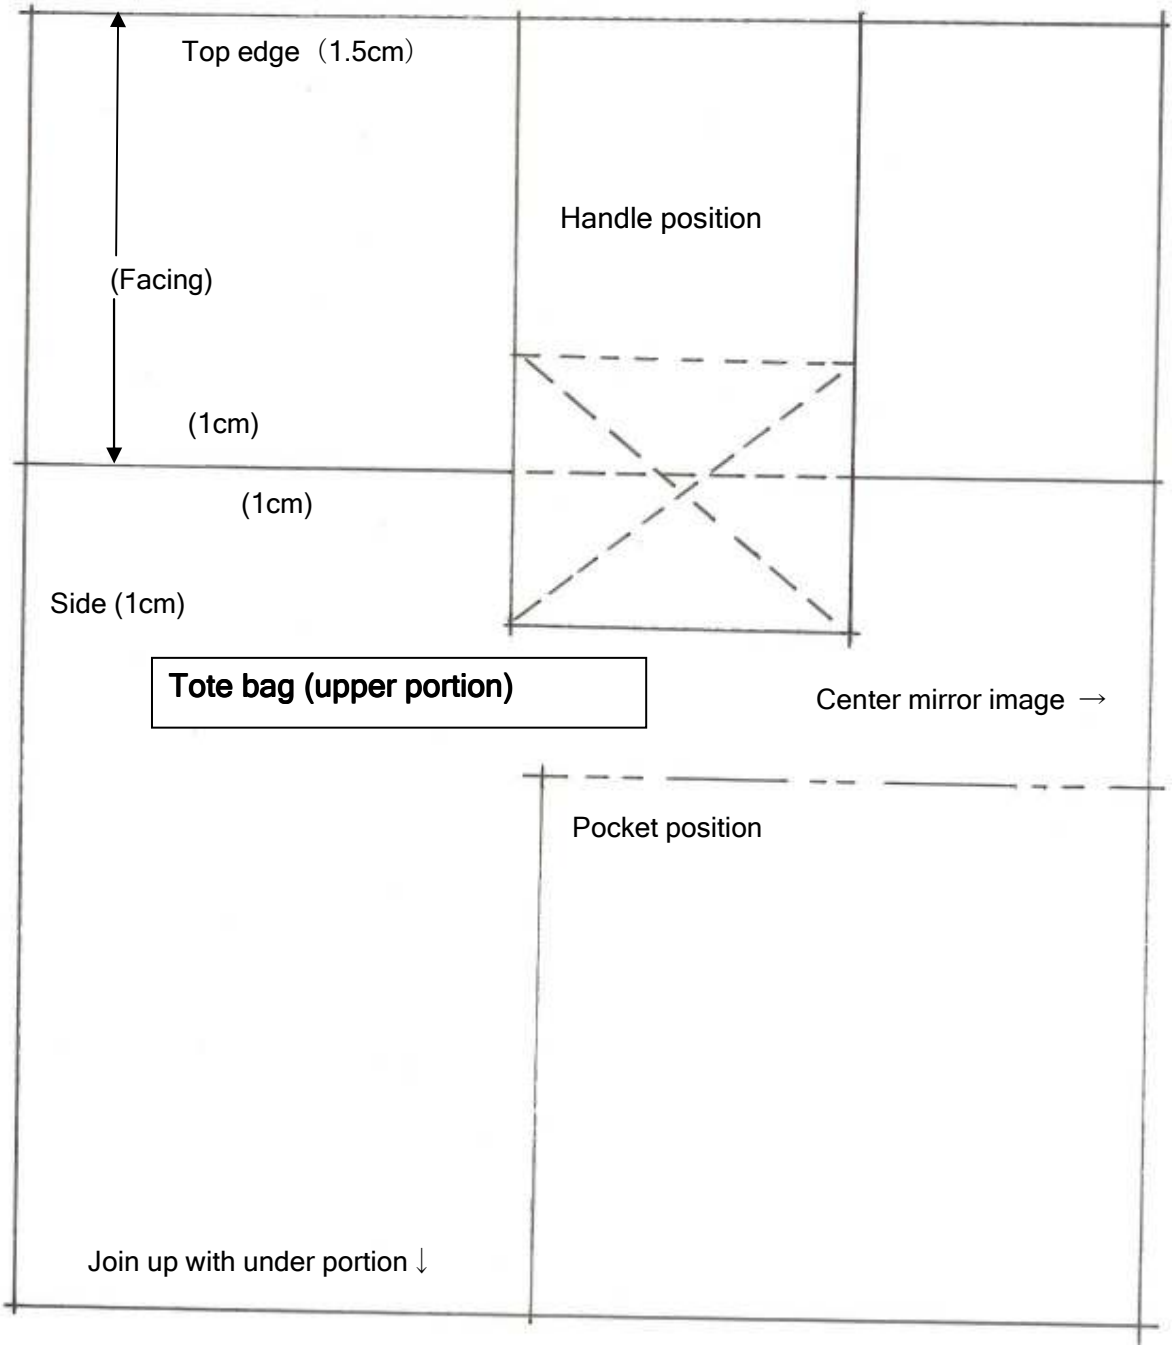
Top edge（1.5cm）
Handle position
(Facing)
(1cm)
(1cm)
Side (1cm)
Tote bag (upper portion)
Center mirror image →
Pocket position
Join up with under portion ↓

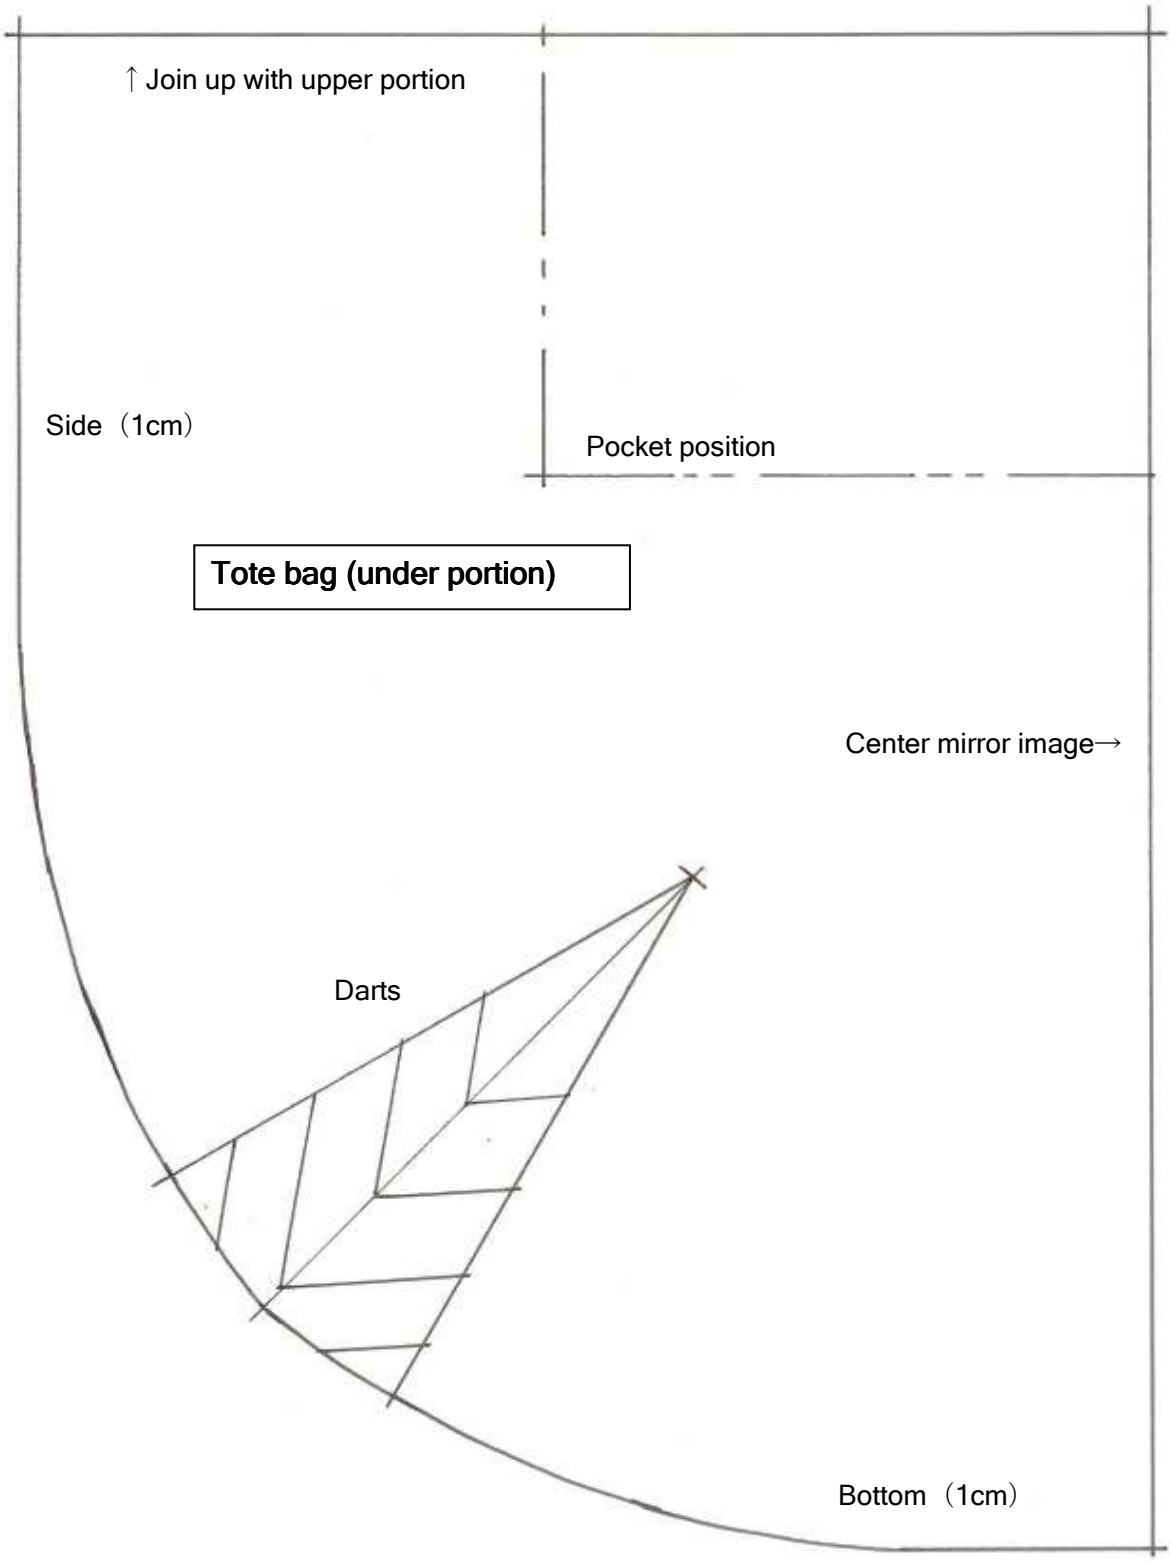

Allowance width is shown in parentheses.

Remember these patterns do **not** have seam allowances yet.

You can trace the pattern directly onto your fabric and add seam allowances to the fabric before cutting it out.

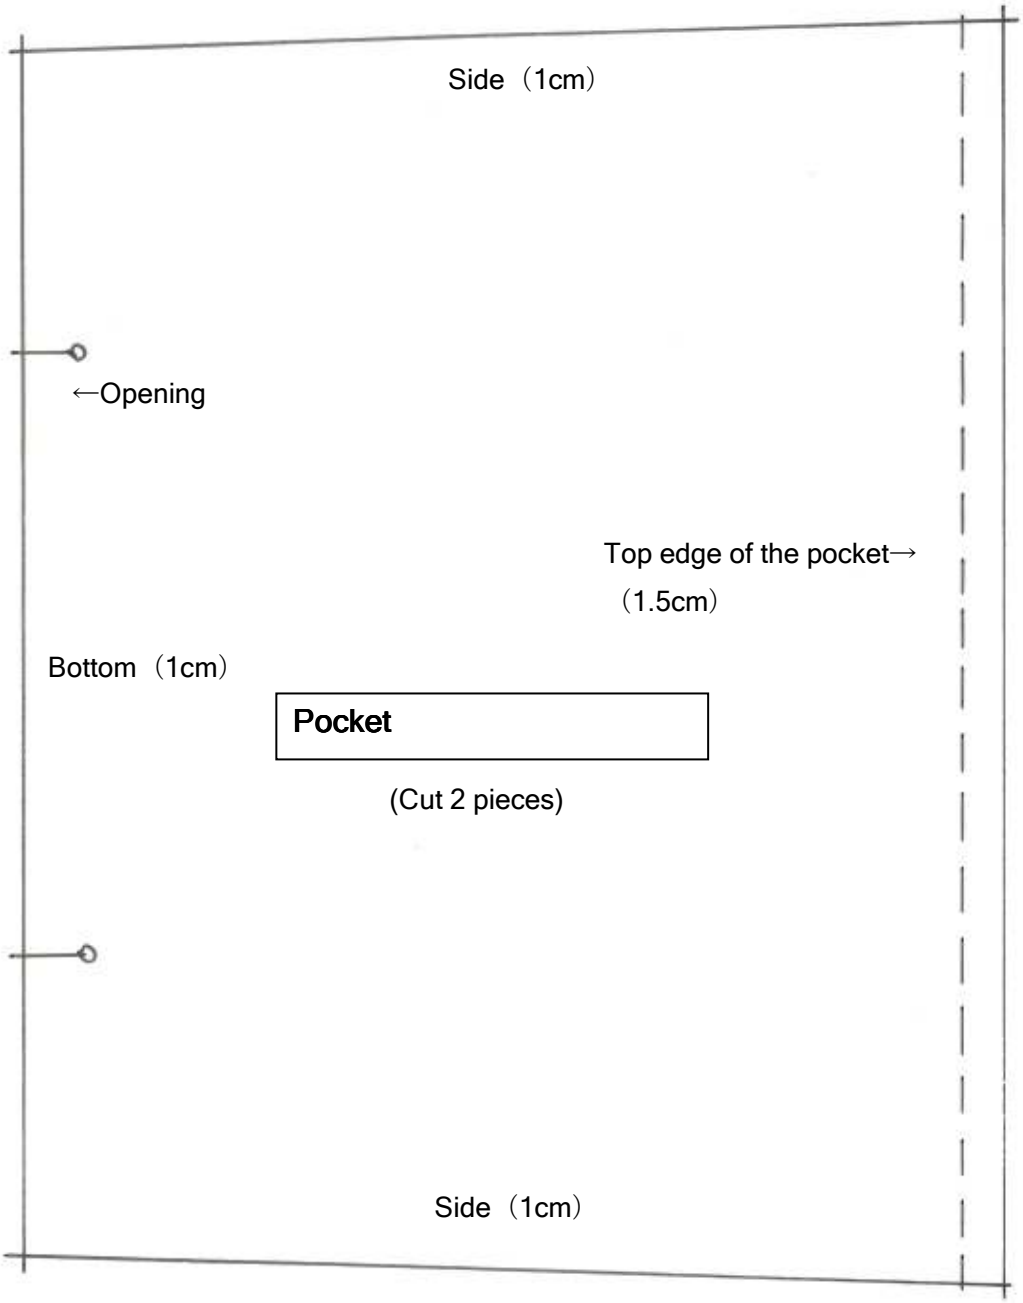
Side（1cm）
←Opening
Top edge of the pocket→
（1.5cm）
Bottom（1cm）
Pocket
(Cut 2 pieces)
Side（1cm）

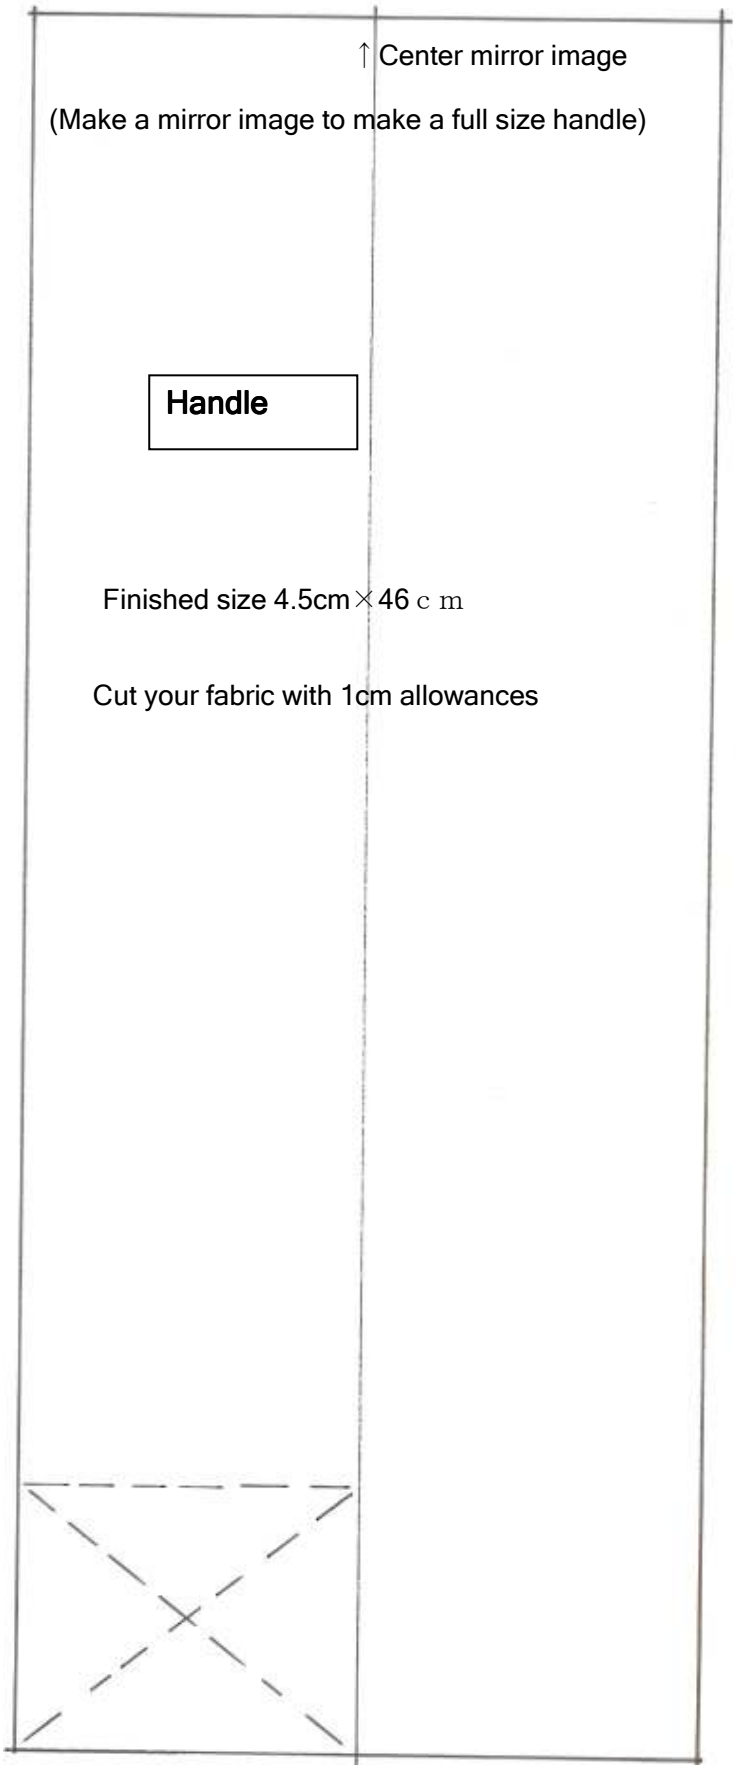
↑ Center mirror image
(Make a mirror image to make a full size handle)
Handle
Finished size 4.5cm×46ｃｍ
Cut your fabric with 1cm allowances